

**ORDERING
INFORMATION**



CALL TOLL FREE
1-800-767-9442
www.carotrim.com

Ordering Pre-Formed Crown Moulding


Using DuraFlex Crown Moulding instead of wood on a curved application allows the user to compensate for any irregularities in the radius of the wall and costs a fraction of its wood counterpart. Flexible radius crown moulding must be pre-formed at the factory.

When ordering crown moulding it is necessary for you to supply Carolina Trim with the following:

- A. The radius of the wall
- B. Whether it is **CONCAVE** or **CONVEX**, **SLOPED ROOFLINE** or for an **ARCHED** or **DORMER** application


INSIDE RADIUS / CONCAVE

Measure width across curve.
Measure depth at center of curve.

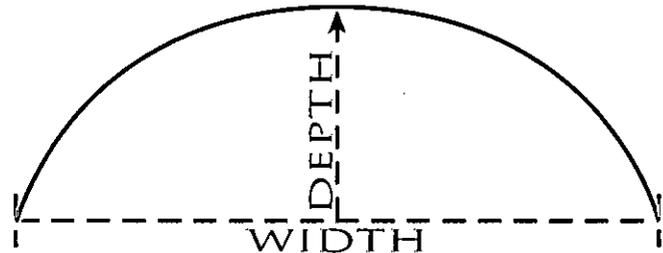

OUTSIDE RADIUS / CONVEX

Measure width across curve.
Measure projection when it is equal on both sides.

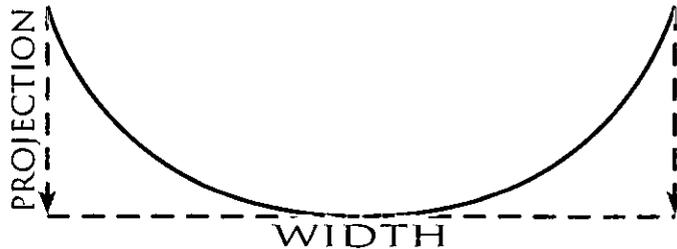

These dimensions allow us to calculate:

- A. Radius
- B. Footage of material needed